 
 


## YOUR YAKBOT

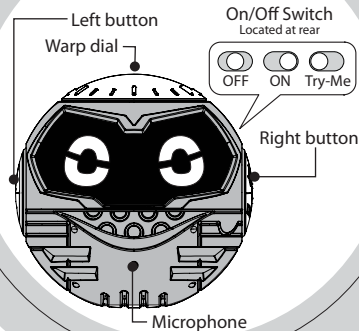


## RECORDING

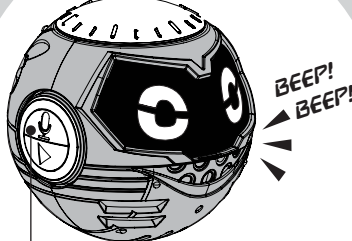


Hold down Left button for 2 seconds or more then let go. Record your voice after the beeping tone. NOTE: Talk towards the microphone.

## PLAYBACK

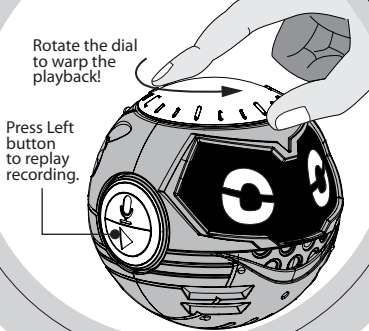

Press Left button to replay recording.


## VOICE FILTERS

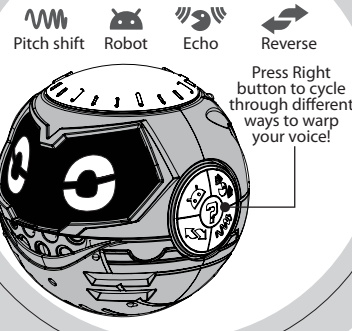

Pitch shift Robot Echo Reverse

Press Right button to cycle through different ways to warp your voice!


## WARP DIAL

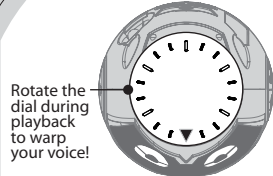

Rotate the dial during playback to warp your voice!

**Centre position**  
• Pitch shift - Normal voice  
• Robot - Half robot  
• Echo - Half echo  
• Reverse - Normal voice


## WARP DIAL

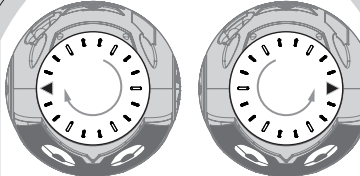

**Left position**  
• Pitch shift - Helium voice  
• Robot - Full robot  
• Echo - Full echo  
• Reverse - Helium voice


**Right position**  
• Pitch shift - Monster voice  
• Robot - Normal voice  
• Echo - Light echo  
• Reverse - Monster voice

## ANSWER MAN

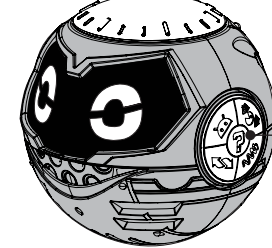

Hold down Right button for 2 seconds. After the prompt, ask Yakbot a Yes/No question and prepare for some awesome advise!

## TIME BLAST PRANK

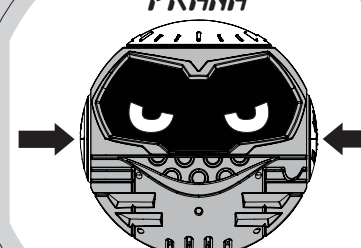

Hold down both buttons for 3 seconds to trigger the secret "time blast prank" mode.

## TIME BLAST PRANK



Roll Yakbot towards your friends during the count down and prepare for a surprise reaction from them!

## TROUBLESHOOTING

**Yakbot's function does not match instructions.**  
• Always ensure switch is in 'ON' or 'OFF' position, not 'TRY ME'.

**Yakbot does not answer my questions properly.**  
• Try to speak closer and louder to the microphone when asking your questions.  
• Yakbot may not always know the answer to your questions, he may say something irrelevant to avoid embarrassment!

**I want to delete a recorded message.**  
• To erase a previously recorded message, press and hold the Left button to record a new one.  
• Alternatively flick switch to 'TRY ME' position then back to 'ON'.

## TROUBLESHOOTING


**Yakbot does not repeat my entire message.**  
• When 'ON' the Yakbot will record up to 10 seconds of sound.

• Ensure to only start speaking after the 'beep' tone.  
• Ensure there are no significant pauses in what you say. Yakbot will think this is the end of your message and begin playback.  
• Try to speak closer to the microphone when recording.

• Make sure you are in a quiet area with no loud background noise and you are holding Yakbot close to your mouth.

## BATTERIES

Requires 2 x AAA/LR03 Batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.

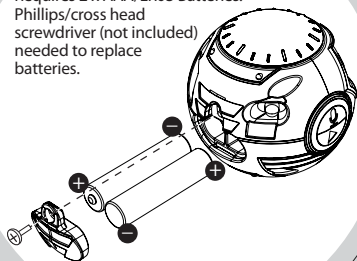

## BATTERIES

- Use new batteries to obtain best performance.
- Alkaline batteries recommended.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries should be replaced by an adult.
- Batteries are to be inserted with the correct polarity.

## BATTERIES

- Exhausted batteries are to be removed from product.
- The supply terminals are not to be short-circuited.
- Batteries are to be removed from the product before long term storage.
- Do not dispose of batteries in fire.

**IMPORTANT NOTE ON BATTERY REPLACEMENT**  
If Yakbot's sounds or buttons do not function properly DO NOT RETURN TO THE STORE. Replace with fresh batteries as shown.

INCLUDES:  
1 Yakbot  
1 Instruction booklet



## FCC STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. **CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with

## FCC STATEMENT

the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
• Reorient or relocate the receiving antenna.  
• Increase the separation between the equipment and receiver.  
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
• Consult the dealer or experienced radio/TV technician for help.

**WARNING:**  
**CHOKING HAZARD** - Small parts.  
Not for children under 3 years.

**WARNING:** DO NOT PLAY SOUNDS CLOSE TO YOUR EAR! **CAUTION:** ADULT SUPERVISION SHOULD BE ENCOURAGED FOR YOUNG CHILDREN. PLEASE REMOVE ALL PACKAGING ATTACHMENTS BEFORE GIVING THIS PRODUCT TO A CHILD. **IMPORTANT:** INDOOR TOY. DO NOT USE ON TABLE OR STAIRS. DROPPING REALLY RAD ROBOTS TOY MAY CAUSE DAMAGE THAT PREVENTS REALLY RAD ROBOTS FUNCTIONS. PLEASE RETAIN PACKAGING DETAILS FOR FUTURE REFERENCE SINCE THEY CONTAIN IMPORTANT INFORMATION. READ ALL INSTRUCTIONS CAREFULLY BEFORE USING PRODUCT. COLORS AND CONTENTS MAY VARY.

FOR AGES  
**5+**



www.moosetoys.com  
©2017 Moose.  
MADE IN CHINA  
www.reallyradrobots.com

